 


CUSTOM NEON[®] DIMMER & REMOTE TUTORIAL

We want you to experience all the amazing features your Custom Neon sign offers. That's what the dimmer and remote are for! The dimmer is the little silver box that comes with your sign, and you use the remote to control it. In the diagram, you see the dimmer connecting to the sign and the adaptor, which then plugs into the wall. Now grab that remote!

Better Together



Important:
The black receiver on the dimmer is not a button. Make sure the dimmer is in clear range of the remote.

Use these buttons to turn your sign on and off.

Brightness buttons dim and brighten the sign. Use LIGHT to reset to 100% brightness or exit a mode.


When Mode is on, use the speed buttons to speed up or slow down the flashing.

The percentage buttons control how bright the sign is.

Party Modes make your sign flash, flicker and pulse. Mode- and Mode+ set the flashing and pulsing.

Use the Time buttons to set how many minutes the sign stays on for.

Tip:
This will be useful when taking photos of your sign, especially at night.

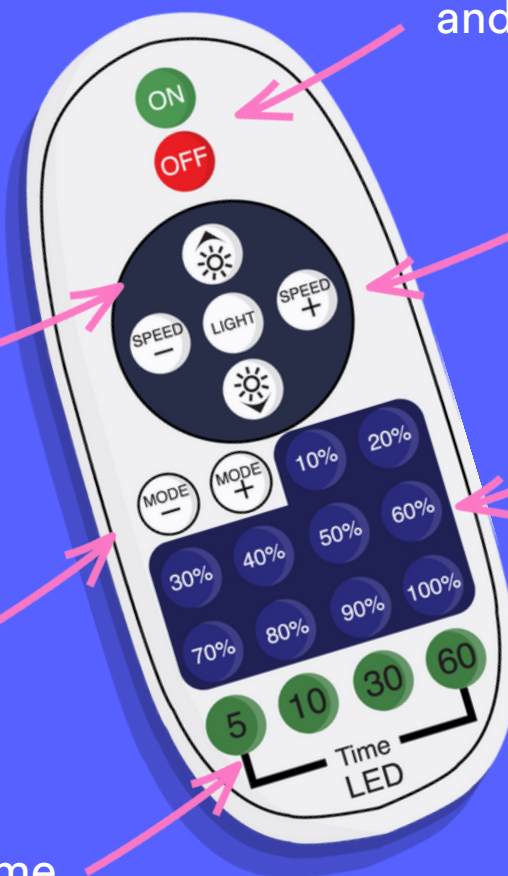

YOU WILL NEED:
- 2 x AAA batteries

If you need help, please [click here](#) or get in touch [@customneon](#).